



energia
CONNEXIÓ

WIFI ROUTER 813G/844G/836GE


- 01** Obrir el **navegador** (Chrome, Firefox, Internet Explorer, Safari...) i a la barra d'adreces escriu la següent adreça IP: **192.168.1.1**
T'apareixerà la següent pantalla perquè **t'identifiquis**:

Residential Gateway

User Name:

Password:

User Name: admin
Password: es troba a una de les etiquetes del teu router (numeració de 8 dígits).
Com es mostra a continuació.

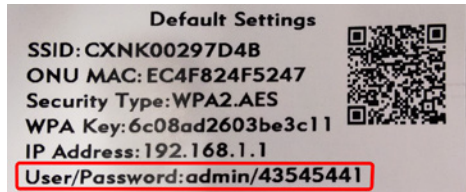

- 02** Una vegada introduïdes les teves credencials clica a Login i t'apareixerà la següent pantalla:
Has de clicar a **Wireless** (taronja) per entrar a la configuració del wifi.



- 03** Per canviar el **nom del wifi** clica a **2.4G Network>SSID Setup** i a **Rename SSID** has de ficar el nom que vulguis i cliques a **Apply** per guardar els canvis.

Status Quick Start **Wireless** Utilities Advanced Support

Wireless

- 2.4G Network
- Radio Setup
- SSID Setup**
- Security
- MAC Authentication
- WMM
- Advanced Radio Setup
- WPS

Service Set Identifier (SSID)

Service Set Identifier (SSID) is used to identify this gateway device for connection to other wireless devices. The SSID may be broadcast to publish its value to aid in connecting this device to other wireless devices or it may be hidden to prevent unauthorized access. The factory-defined SSID values may be redefined to a user-specified name.

SSID (Network Name): CXNK004F8BF8

SSID State: Enabled Disabled

Broadcast SSID: Enabled Disabled

Rename SSID:



- 04** Per canviar la contrasenya del wifi clica a **2.4G Network>Security** i activa *Use Custom Security Key*, escrius la contrasenya que vulguis i cliques a *Apply* per guardar els canvis.

The screenshot shows the 'Security' configuration page in the router's web interface. The 'Wireless' menu is open, and 'Security' is selected. The page title is 'Security' and it includes the instruction: 'Secure your wireless traffic as it transmits through the air.' The configuration fields are: SSID (Network Name): CXNK004F8BF8; Security type: WPA2-Personal; Encryption type: AES; Security Key / Passphrase: 'Use Default Security Key' is selected with the key 's4e61f47d1b5ac30', and 'Use Custom Security Key' is unselected with the key '1234567890'. An 'Apply' button is at the bottom.

- 05** Si vols canviar el canal wifi: *Wireless > 2.4G Network > Radio Setup* El **Channel** està a Auto, has de posar el Canal que vulguis.

Pots guiar-te per alguna aplicació d'analitzador del wifi per saber el millor canal.

Es recomana revisar-ho en els casos en què co-existeixen diverses xarxes wifi que poden crear interferències entre si, com per exemple, a comunitats de pisos.

The screenshot shows the 'Radio Setup' configuration page in the router's web interface. The 'Wireless' menu is open, and 'Radio Setup' is selected. The page title is 'Radio Setup' and it includes the instruction: 'Radio Setup provides the ability to customize the wireless radio for your specific network needs.' The configuration fields are: Wireless Radio: On (selected); Mode: 802.11b, 802.11g, and 802.11n; Bandwidth: 20 MHz; Channel: Auto; Power Level: 100%; Airtime Fairness: unchecked; Frame Burst: checked; PMF: unchecked. An 'Apply' button is at the bottom.